


**Tools needed for mounting:**


- allen wrench
- drill
- screwdriver

**NOTE!** A list of products corresponding with the selected accessories is available at [www.KlusDesign.eu](http://www.KlusDesign.eu)


**1.** Drill a 5mm hole in the selected extrusion.

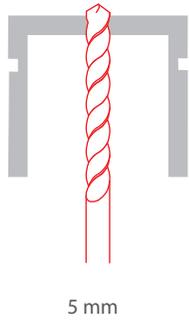


**2.** Bevel the hole so that the plastic screw head fits in.

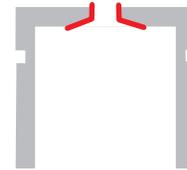

**3.** Put the screw through the hole and attach it to the head.

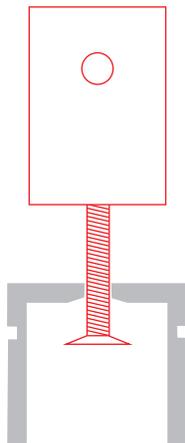

**4.** Mount the arm in the head. Block the arm by tightening the pressure screw in the head with the Allen wrench.

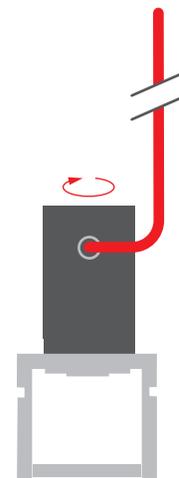

**5. NOTE!** The position of the lighting fixture on the arm can be adjusted in the range of 360° (depending on the distance of the fastener from the edge of the extrusion).

